


6' Parking Bumper - 3 Views

Standard reinforcement 2 #4 gr60 rebar full length less coverage

Standard Concrete Mix 4500 psi

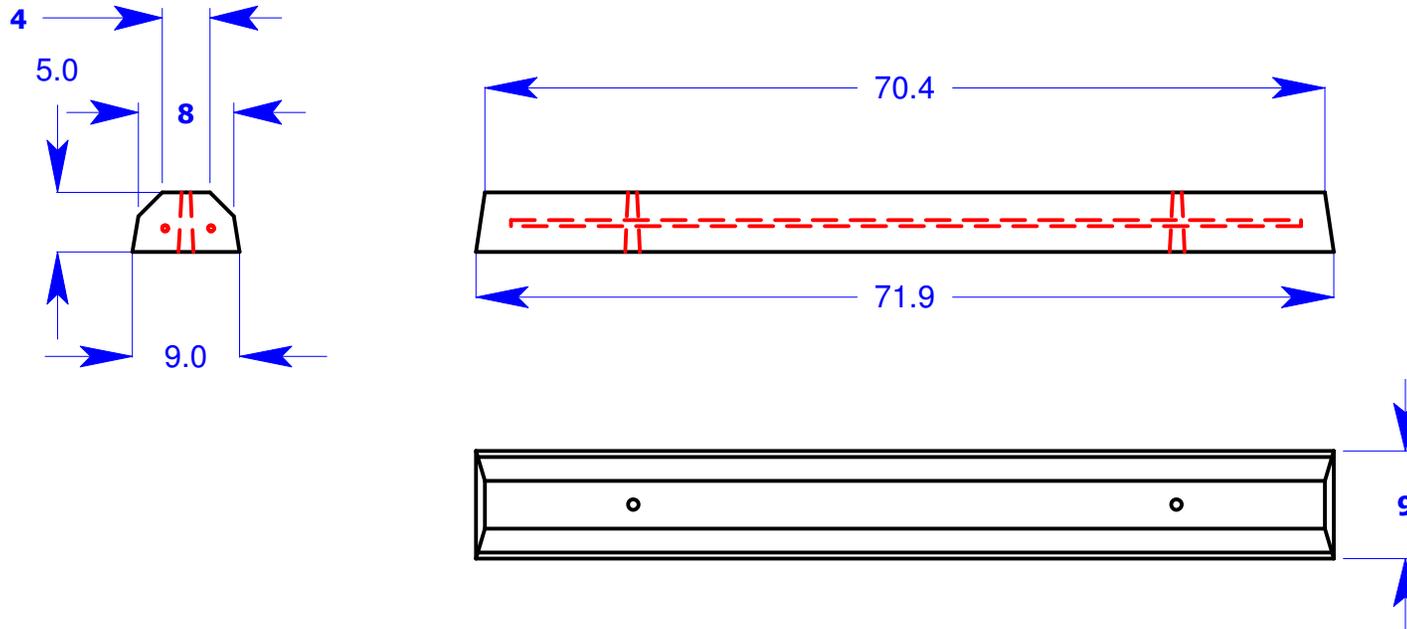

Installation:

1. Place parking block in desired position.
2. Using a hammer drill, drill holes in substrate through the two existing holes in the parking blocks.
3. Insert steel pins into the holes in the parking block and drive the pins until flush with the top of the parking block. If unable to drive pins flush pins must be cut flush with the top of the parking block.

CONFAB Inc.
Precast Concrete Products

882 N. Marshall Way
Layton, UT 84041
Ph. (801) 544-9054
Fax: (801) 544-9154